

NOKTable

Turntable Stand

Instructions

Setting up the NOKTable Turntable Stand is relatively simple: fit the spikes, put on the top board and put your turntable on top of it. But here are a few suggestions to get the best performance out of it.

1. The longer, pointier spikes should go on the bottom of the metalwork.
2. The shorter cap screws go in the top, point up.
3. Performance is better with most of the threads inside the stand – only a thread or two visible above the lock nuts where possible (some spikes will need more for leveling).
4. The lock nuts should not be too tight. Snug with the fingers and less than an eighth of a turn with a wrench. Just barely tight.
5. Once the stand is placed in the desired location, level the frame. Make sure all four spikes are receiving the pressure of the stand equally so there is no rocking.
6. Once the stand is level place the top board on it with the circles down so the points are inside the circles – reposition circles if necessary (these are there to help prevent the board from sliding on the top spikes). Level the top board and again make sure that all four points have equal contact then snug up the lock nuts. You should be able to tap diagonally opposed corners and hear no rattling. If you are using any turntable other than an LP12 with Trampolin you can now set the turntable on top, make sure its plinth doesn't wobble and you are good to go. If there is wobble either adjust the turntable feet or shim them to assure no rocking of the plinth is possible.
7. For LP12s with a Trampolin the last procedure needs to be modified. The Trampolin will allow the right rear corner of the LP12 to set a little lower because most of the weight is in that corner. So the top board needs to be adjusted a little up in that corner, and a little less on the front left, to make the turntable itself level. The best procedure is to put a level on the platter and adjust the top spikes to make the platter level. Once you have done that take the LP12 off the stand and make sure the board does not rattle as above. If it does rock, fine tune the spikes trying to keep the board at the same angle it was set at and snug up the lock nuts. Put the LP12 back on and check the level again. It might take a couple of attempts to get the top board solid and still have the LP12 level but it is worth the effort.
8. The NOKTable stand setup is now done. Enjoy the improved musical performance of your turntable on the NOKTable Turntable Stand!

Nokturne Audio • 8259 Hugh St • Westland, MI 48185

www.nokturneaudio.com • 734-612-4009